


PLAN VIEW

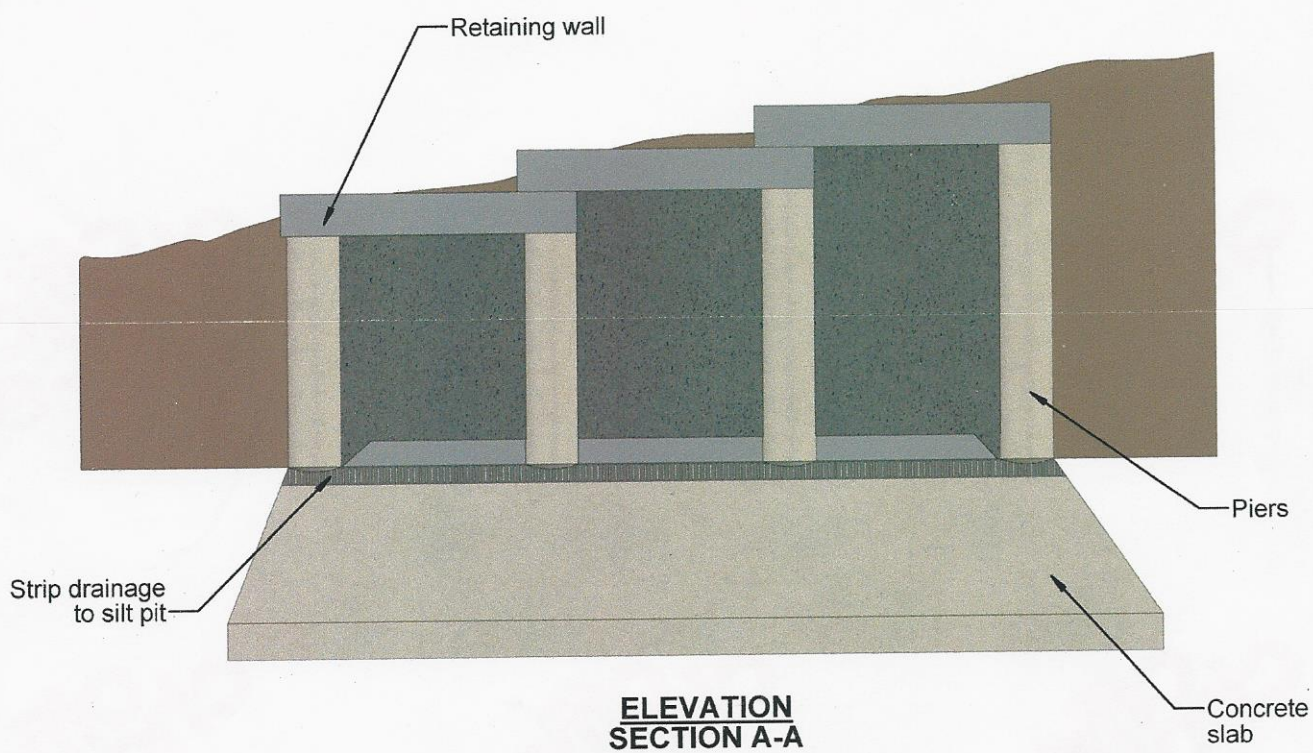

ELEVATION SECTION A-A

Notes:

- Drill piers
- Excavate
- Prepare reinforcing mesh
- Spray instant set membrane onto earth-piers-reo
- shotcrete finish
- * Geotech fabric may be required to be pegged to cut if too wet or unstable, etc.
- * Site inspection required.

A Australian
I Institute of
W Waterproofing



SHOT CRETE WALL - SPRAYED WATERPROOFING

Ph: (03) - 8812 2918
Email: info@waterproofingfew.com.au
Web: www.waterproofingfew.com.au

© Copyright - all rights reserved 2016

Number BG-040
Revision B